# Waters<sup>™</sup>

アプリケーションノート

# Implementing Programmed Injection Techniques in Empower™ CDS: A Practical Guide

Szabolcs Fekete, Mateusz Imiolek

<sup>1</sup> Waters Corporation, Geneva, Switzerland

Published on May 26, 2025

**Contact Sales** 

# **Application Brief**

This is an Application Brief and does not contain a detailed Experimental section.

# Abstract

Programmed injection techniques, including sequential and bracketed injection modes, are increasingly important tools for improving chromatographic workflows. These advanced injection strategies are particularly valuable for minimizing solvent mismatch, reducing band broadening, enhancing peak symmetry, and automating sample preparation, especially when analyzing large biomolecules such as monoclonal antibodies (mAbs), nucleic acids, and lipid nanoparticles (LNPs). Empower Chromatographic Data System (CDS) offers flexible implementations — such as *Auto Additions* and *In-Needle Auto Additions* — to realize these advanced injection sequences in an automated and reproducible manner. This application note offers practical guide to performing programmed injections in Empower CDS, highlighting how these methods can optimize sample

introduction and chromatographic performance in challenging applications.

### Benefits

- Improved Chromatographic Performance: Programmed injection techniques help to reduce solvent mismatch effects, minimize peak distortion, and improve recovery and reproducibility.
- Enhanced Automation and Workflow Efficiency: Empower CDS enables automated execution of advanced injection sequences, reducing manual sample preparation steps and increasing throughput while minimizing the risk of human error.
- Versatile Application Across Techniques: These injection strategies are applicable to a range of chromatographic modes — including AEX, HILIC, and SEC — making them broadly useful for biopharmaceutical analyses requiring sensitive handling of complex samples.

## Introduction

Bracketed or sequential (also referred to as stacked or programmed) injection modes are particularly valuable for the analysis of complex biotherapeutics.<sup>1</sup> Modern autosamplers are increasingly capable of performing sophisticated liquid handling tasks beyond simple sample injection, including mixing, dilution, derivatization and internal standard addition.<sup>2,3</sup> Among these capabilities, sequential injection methods or performanceoptimized injection sequence (POISe) - have been shown to provide significant analytical benefits by minimizing solvent mismatch effects and reducing extra-column band broadening.<sup>4,5,6</sup> POISe techniques, in which weak solvent plugs are co-injected with the sample, improve solute focusing (at the head of the column), resulting in sharper peaks and mitigating band broadening. Despite these advantages, these approaches remain underutilized in routine chromatographic workflows.

Various programmed injection strategies have demonstrated their usefulness in a variety of biopharmaceutical applications. In anion exchange chromatography (AEX) of large nucleic acids, such as mRNA, a sequential injection using a high salt concentration bracketing plug (*i.e.* injecting nucleic acids between plugs of 2 M NaBr at pH ~10) significantly reduced carryover and improved analyte recovery.<sup>7</sup> Similarly, hydrophilic interaction chromatography (HILIC) analyses of monoclonal antibodies (mAbs) can benefit from sequential injection methods. A mismatch between the aqueous sample diluent and the highly organic mobile phase can lead to solute breakthrough and distorted peak shapes.<sup>8,9</sup> "Bracketing" the injection of aqueous mAb samples with acetonitrile (MeCN) plugs has been shown to mitigate this mismatch, allowing injection of larger sample volumes (up to 5% of the column volume) without compromising peak symmetry or inducing breakthrough.<sup>10</sup>

In addition, programmed injection strategies facilitate sample preparation for size exclusion chromatography (SEC) of lipid nanoparticles (LNPs) encapsulating nucleic acids. LNP formulations are sensitive to mechanical and chemical stress and require gentle and reproducible handling. In this context, automated sequential injection programs have been used to dilute LNP samples and introduce detergents to release encapsulated RNA payloads.<sup>11</sup> All those automated injection methods improve reproducibility, reduce human error and limit analyst exposure to hazardous reagents.

In summary, programmed (bracketed, sequenced or stacked) injection modes represent a highly effective approach to improving the chromatographic performance or sample preparation of large molecule biotherapeutics.

This application note provides a brief technical description of how to implement programmed injections in the Empower Chromatographic Data System (CDS).

## **Results and Discussion**

### **Options to Perform Programmed Injection Sequence**

1. Prep Type / In-Needle Auto Additions / Sample Prep (Empower CDS 3.6.0 and above)

In later versions of Empower CDS (3.6.0 and above) you can select the *Prep Type* column in the *Sample Set* table and use the *In-Needle Auto Additions* function to access advanced injection and sample preparation options.<sup>12,13</sup> If the *Prep Type* and *In-Needle Auto Additions* columns do not appear in the *Sample Set*, the *Prep Type* and *Sample Prep* columns must be enabled ("unhidden") in the *Table Properties* to make it visible and accessible. You can do this by going to the *Table Properties* (of the *Sample Set*) and checking the status of *Columns* and *Hidden Columns* (Figure 1). Once the *Prep Type* and *Sample Prep* are accessible, it is easy to program injection sequences.

R	Vial	inj Vol	# of injs	Labe	el SampleNi	sme L	evel	Fun	ction	Method Repo Export I	rt or	Label Reference	Proces	sing	Run Time (Minutes	Dat Sta	rt	Next Inj. Delay Minutes)	SampleWeig	ht Dik	ution
1	1	1.00	1					Inject Sar	nples	LC Demo Met	hod Set		Normal		10.0	0	0.00	0.00	1.000	1.00	0000
			44	d Row		_		_	Table D	roperties						×					
				ert Row				-								^	-				
		Del	ete Rov	w(S)				Colum	Fonts Col Hidden Col												
		Cut							Prep Ty	pe	^		Auto								
			Co							Sample Sample				) Man							
		Pas							Diution	atio Reference Name		Fixed C	nmuk								
				le Colu	mn Columns					Column	Name Serial Number Matrix			~							
			Prin	nt Table				_					Criteria								
		-	Tab	le Prop	erties					Hide Al	S	how All		v Crte	ria Informat	on					
			Col	lumn P	roperties			-					C Sho	w Valu	es with For	nulat					
			Sin	gle Inje	ct																
										Nethod Set /	OK	Cancel		aply .		Next Ini					
4	Vial	nj Vol	# of Injs	Label	Sampleflame	Level		Function		Nethod Set / Report or Export Method	OK Label Reference	Cancel	R		Deta Start (Minutes)	Next Inj Delay (Minutes)	Pre		ample Sampl	Weight	Diu
1	Vial 1	inj Vel 1.00		Label	Samplehame	Level		Function It Samples	_	Report or	Label		ng Ru Tar (Minu		Deta Start	Next Inj. Delay			htep antip	Weight	
1		Vol	injs	Label	Sampletiame	Level			_	Report or Export Method	Label	Processir	ng Ru Tar (Minu	n ve tes)	Data Start (Minutes)	Next Inj Delay (Minutes			htep antip		
1		Vol	injs	Label	SampleName	Level			_	Report or Export Method	Label Reference Table Proper Columns Fg	Processi Normal ties	ng Ra Ta (Mino 1	n ve tes)	Data Start (Minutes)	Next Inj Delay (Minutes		•	htep antip		-
1		Vol	injs	Label	Sanpiellame	Level			_	Report or Export Method	Label Reference Table Proper Columns Fr	Processi Normal ties orts Colors Adden Colors	ng Ra Tar (Mins 1	n ve tes)	Data Start (Minutes) 0.00	Next Inj. Delay (Minutes) 0.00	755	•	htep antip		
1		Vol	injs	Label	Sampletiame	Level			_	Report or Export Method	Label Reference Table Proper Columns Fr	Processi Normal ties tidden Colors Ridden Colors Sample Prep Sample Prep	ng Ru Tir (Mins 1	n ve tes) 0.00	Data Start (Minutes) 0.00	Next Inj. Delay (Minutes) 0.00	Tys G BC	•	htep antip		
_		Vol	injs	Label	Samplehlame	Level			_	Report or Export Method	Label Reference Table Proper Columns Fr	Processi Normal ties tidden Colors Note Colors Sample Prep Sample Prep Sample Prep	ng Rin Tar (Mins 5 9 ptc	n ve tes) 0.00	Data Start (Minutes) 0.00	Next Inj. Delay (Minutes) 0.00	Tys G BC	•	htep antip		
2		Vol	injs	Label	Samplehame				_	Report or Export Method	Label Reference Table Proper Columns Fr	Processi Normal ties tidden Colors Ridden Colors Sample Prep Sample Prep	ng Ru Trans (Mins 5 9/4 Reference 10 Number	n ve tes) 0.00	Data Start (Minutes) 0.00	Next Inj. Delay (Minutes 0.00 olumn Size @ Automa O Manual	Tys G BC	•	htep antip		
1		Vol	injs	Label	Samplefäanne				_	Report or Export Method	Label Reference Table Proper Columns Fr	Processi Normal ties ties tiden Column Sample Prep Diston Sample Prep Diston Peak Rato Column Nam Column Nam	ng Ru Tir (Mini 1 5 6 Prt Reference ise al Number ts	n ettes) 0.00	Deta Start (Minutes) 0.00	Next Inj Delay (Manutes 0.00 olumn Star @ Adoma Column	9 BC	×	htep antip		
_		Vol	injs	Label	SampleName				_	Report or Export Method	Label Reference Table Proper Columns Fr	Processii Normal ties ties Colons Normal Pres Sample Pres Sample Pres Sample Area Diution Peak Rato I Column Sein Column Sein Column Sein Column Sein Column Sein	ng Ru Tir (Mini 1 5 6 Prt Reference ise al Number ts	n (e) (tes) () () () () () () () () () () () () ()	Data Start (Minutes) 0.00 Bred	Next Inj. Delay (Minutes) 0.00 olumn Star @ Automa O Manual Column	9 fic v	×	htep antip		
1		Vol	injs	Label	Sampletiame				_	Report or Export Method	Label Reference Table Proper Columns Fr	Processii Normal ties ties Colons Normal Pres Sample Pres Sample Pres Sample Area Diution Peak Rato I Column Sein Column Sein Column Sein Column Sein Column Sein	ng Ru Tir (Mini 1 5 6 Prt Reference ise al Number ts	n (e) (tes) () () () () () () () () () () () () ()	Data Start (Minutes) 0.00 Bred	Next Inj. Dolay (Minutes) 0.00 olumn Star @ Automa O Manual Column	9 fic v	×	htep antip		
_		Vol	injs	Label	Sampieliame				_	Report or Export Method	Label Reference Table Proper Columns Fr	Processi Normal ties onts Colon Sample Prep Sample Prep Sample Prep Diston Column Nam Column Nam Column Nam Column Nam Column Nam Column Nam Column Nam Column Nam	ng Ru Tir (Mini 1 5 6 Prt Reference ise al Number ts	n (e) (tes) () () () () () () () () () () () () ()	Data Start (Minutes) 0.00 Bred Coten S	Next Inj. Dolay (Minutes) 0.00 olumn Star @ Automa O Manual Column	9 fic v	e i	htep antip		Dilution

Figure 1. Accessing the Prep Type / Sample Prep columns.

Consider the following example: We have a solvent in vial 1:A,1 and two separate samples in vials 1:A,2 and 1:A,3. We are going to mix the two samples and introduce the mixture, bracketed in a solvent plug, into the flow path. Figure 2 shows the appropriate setting for *In-Needle Auto Additions*. First 1.0  $\mu$ L is drawn from 1:A,1 (solvent), then 0.5  $\mu$ L from vials 1:A,2 and 1:A,3 and finally 1.0  $\mu$ L of solvent is drawn from 1:A,1. With such an injection sequence, the needle will inject the entire 3  $\mu$ L (1+0.5+0.5+1  $\mu$ L) of liquid.

r	Plate/Well	Inj Vol (uL)	# o Inj		Sam	npleName		Method Set / Report or Export Method		Run Time (Minutes)	Sample Prep	Ргер Туре
1	1:A,1	1.0		In-N	Sel	Ile Auto Ad lected Plate/ All volumes t the needle a specified del	Well: 1 below will nd injecte		×	10.00	(1:A,2),0.5;(1:A,3),0.5;(1:A,1),1.0	In-Needle Auto Additions
				Y	X	PlateA	Well	Inj Vol (uL)				
	1			<u> ا</u> <	1	1:A,1		1.0				
-	2	na _			2	1:A,2		0.5				
	4				3	1:A,3	0.5		-			
	4		- '	- P	4	1:A,1		1.0				
-				-	5							
-					6							
+				-	7							
				-	8							
					9				_			
				-	10				-			
									-			
				-					-			
					1	Delay Time (i	minutes):	0.00	]			
				т	otal	volume injec	ted (uL) :	3.0	]			
				C	(	Ж	Cancel	Help				

Figure 2. In-Needle Auto Additions editor accessed via the Sample Prep cell.

#### 2. Auto Additions (Empower CDS up to the version 3.6.0)

In earlier versions of Empower CDS (up to the version 3.6.0), the injection and sample preparation options are accessible via the *Auto Additions* option in the *Sample Set*.<sup>12,13</sup> If the *Auto Additions* column does not appear in the *Sample Set*, the *Auto Additions* column must be enabled ("unhidden") in the *Table Properties* to make it visible and accessible. You can do this by going to the *Table Properties* (of the *Sample Set*) and checking the status of *Columns* and *Hidden Columns*. Once the *Auto Additions* is accessible, it is easy to program injection sequences.

Consider the following example: We have acetonitrile (MeCN) in the vial 1:A,1 and a monoclonal antibody (mAb) sample in the vial 1:A,2 and we are going to perform a bracketed injection for a HILIC separation. Figure 3 shows the corresponding *Sample Set*. We plan to first perform a MeCN blank injection (line 1 in the Sample Set), then a mAb sample injection (line 2 in the *Sample Set*) and finally we "bracket" the mAb sample between MeCN solvent plugs (line 3 in the *Sample Set*).

To perform the bracketed injection we need to indicate the position of the first vial (MeCN) - of the sequence - in the *Plate/Well* column of the *Sample Set*. Figure 3 shows that a 2.0 µL volume is first taken from the vial placed at the 1:A,1 position. Then click on the *Auto Additions* cell and select *Edit Auto Additions* from the drop-down menu (shown in Figure 3).

E	Plate/Well	lnj Vol (uL)	# of Injs	SampleName	Function	Method Set / Report or Export Method	Run Time (Minutes)	Auto Additions	
1	1:A,1	2.0	1	MeCN	Inject Samples	100%A to 100%B 10min 03mLm 25C	15.00		2
2	1:A,2	2.0	1	mAb sample	Inject Samples	100%A to 100%B 10min 03mLm 25C	15.00		
3	1:A,1	2.0	1	MeCN mAb MeCN	Inject Samples	100%A to 100%B 10min 03mLm 25C	15.00		Auto Fill
_							-	-	Edit Auto Additions
							-		Add Row
									Insert Row
									Delete Row(s)
									Cut
									Сору
_									Paste
_								<u> </u>	Hide Column
_		_					-	-	Show All Columns
									Print Table
									Table Properties
									Column Properties
_									Single Inject

Figure 3. Editing the Auto Additions option in the Sample Set.

This opens the *Auto Additions Editor* where you can program the injection series by specifying the position of the vials to be drawn from and the corresponding volumes (Figure 4). In our example, 1:A,2 (mAb sample) and 1:A,1 (MeCN) are both specified with volumes of 2.0  $\mu$ L. The final sequence is as follows: First the needle takes 2.0  $\mu$ L from 1:A,1, then 2.0  $\mu$ L from 1:A,2 and finally 2.0  $\mu$ L again from 1:A,1 (Figure 4). The user can complete the command by clicking the OK button in the *Auto Additions Editor*. With such an injection sequence, the needle will inject the entire 6  $\mu$ L (2+2+2  $\mu$ L) liquid volume into the flow path.

	E	Plate/Well	Inj Vol (uL)	# of Injs	SampleName	Function	Method Set / Report or Export Method	Run Time (Minutes)	Auto Additions	Au	to-A	dditions Editor		×	
	1	1:A,1	2.0	1	MeCN	Inject Samples	100%A to 100%B 10min 03mLm 25C	15.00			E	Plate/Well	lnj Vol		
_	2	1:A,2	2.0	1	mAb sample	Inject Samples	100%A to 100%B 10min 03mLm 25C	15.00			-		(uL)		
st —	3	1:A,1	2.0	1	MeCN mAb MeCN	Inject Samples	100%A to 100%B 10min 03mLm 25C	15.00			1	1:A,2	2.0	←	- 2
											2	1:A,1	2.0	$\leftarrow$	- 3
											-				
			1' 2'	nd g	uence: 2 µL from 2 µL from 2 µL from	1:A,2 (m/	Ab sample)				De	lay: 0.00	minutes	,	
	_		_					-		L		OK Can	Hel		

Figure 4. Programming a series of injections within Auto Additions Editor.

Once the commands in the *Auto Additions Editor* have been completed, the positions of the vials included in a given injection sequence and the corresponding volumes appear in the *Auto Additions* cell of the *Sample Set* (Figure 5).



Figure 5. Injection events indicated in the Plate/Well and Auto Additions cells.

Note the difference in drawing order between *Auto Additions* and *Sample Prep's In-Needle Auto Additions*. The former does not list the entire drawing/injecting sequence in its editor. The first draw is indicated in the *Plate/Well* cell of the *Sample Set* and the *Auto Additions Editor* lists the rest of the sequence events (from the second draw). In contrast, the *Sample Prep In-Needle Auto Additions* editor lists the entire injection sequence.

#### 3. Example

The example in Figure 6 compares a simple injection of an oligonucleotide (ON) ladder in HILIC mode (panel A) and a programmed injection sequence where the ON sample is bracketed with MeCN solvent plugs (panel B). The simple injection results in a severe breakthrough effect due to solvent mismatch (signal increase at column dead time) and splitting for peaks 1, 2, and 3. In contrast, when the ON sample is injected between weak solvent plugs (MeCN), no splitting or breakthrough is observed.

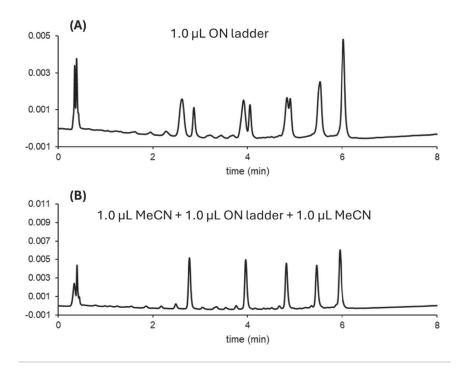


Figure 6. Illustration of the advantage of a "bracketed" injection sequence for oligonucleotide (ON) separation in HILIC mode. Panel A shows a simple ON injection, while panel B shows a bracketed injection.

# Conclusion

Programmed injection techniques are highly effective for overcoming sample introduction challenges associated with the chromatographic analysis of biotherapeutics. By leveraging Empower CDS capabilities such as *Auto Additions* and *In-Needle Auto Additions*, users can automate advanced injection sequences. This not only improves analytical performance but also enhances workflow efficiency and reproducibility. Empower CDS provides an accessible and robust platform to implement these techniques, supporting the evolving needs of biopharmaceutical analysis.

# References

- 1. S. Fekete, M. Imiolek, Advantages of Sequential or Bracketed Injection Methods to Improve the Chromatographic Analysis of Biotherapeutics, LCGC International, Column 20 (2024) 17–24.
- 2. F. Steiner, K. Paul, HPLC Autosamplers: Perspectives, Principles, and Practices, LCGC N.A. 37 (2019) 514–529.
- 3. H. Kataoka, Chapter 1 Sample preparation for liquid chromatography, *Liq. Chromatogr.* 2 (2023) 1–48. https://doi.org/10.1016/B978-0-323-99969-4.00006-1 < https://doi.org/10.1016/B978-0-323-99969-4.00006-1 >
- A.C. Sanchez, J.A. Anspach, T. Farkas, Performance optimizing injection sequence for minimizing injection band broadening contributions in high efficiency liquid chromatographic separations, *J. Chromatogr.* A. 1228 (2012) 338–348. https://doi:10.1016/j.chroma.2012.01.038.
- K. Vanderlinden, K. Broeckhoven, Y. Vanderheyden, G. Desmet. Effect of pre- and post-column band broadening on the performance of high-speed chromatography columns under isocatic and gradient conditions, *J. Chromatogr.* A. 1442 (2016) 73–82. https://doi:10.1016/j.chroma.2016.03.016.
- 6. J.A. Anspach, A.C. Sanchez, T. Farkas, Injection Sequence for Optimizing Performance in UHPLC Separations, Phenomenex, http://phx.phenomenex.com/lib/po89900911\_L\_2.pdf, consulted on 25th of September 2023.
- 7. S. Fekete, M. Lauber, Salt plug injection methods for improved anion exchange analyses of large nucleic acids, Waters Application Note, 720007991, July 2023.
- S. Chapel, F. Rouvière, V. Peppermans, G. Desmet, S. Heinisc. A comprehensive study on the phenomenon of total breakthrough in liquid chromatography, *J. Chromatogr.* A. 1653 (2021) 462399. https://doi:10.1016/j.chroma.2021.462399.
- 9. S. Chapel, F. Rouvière, S. Heinisch. Comparison of existing strategies for keeping symmetrical peaks in online Hydrophilic Interaction Liquid Chromatography x Reversed-Phase Liquid Chromatography despite solvent strength mismatch, *J. Chromatogr.* A. 1642 (2021) 462001. https://doi:10.1016/j.chroma.2021.462001.
- R Perez-Robles, S. Fekete, R. Kormány, N. Navas, D. Guillarme. Improved sample introduction approach in hydrophilic interaction liquid chromatography to avoid breakthrough of proteins, *J. Chromatogr.* A 1713 (2024) 464498. https://doi.org/10.1016/j.chroma.2023.464498.
- 11. V. D' Atri, M. Imiołek, C. Quinn, A. Finny, M. Lauber, S. Fekete, D. Guillarme. Size exclusion chromatography of biopharmaceutical products: from current practices for proteins to emerging trends for viral vectors, nucleic acids and lipid nanoparticles, J. Chromatogr, A, 1722 (2024) 464862. https://doi.org/10.1016/j.chroma.2024.464862.
- 12. https://support.waters.com/KB\_Inf/Empower\_Tips\_of\_the\_Week/WKB121702\_In-

Needle\_Auto\_Additions\_in\_Empower < https://support.waters.com/KB\_Inf/Empower\_Tips\_of\_the\_Week/WKB121702\_In-Needle\_Auto\_Additions\_in\_Empower> .

13. https://support.waters.com/KB\_Inf/Empower\_Breeze/WKB205071\_How\_to\_use\_Auto\_Additions\_in\_Empower\_360\_and\_a

https://support.waters.com/KB\_Inf/Empower\_Breeze/WKB205071\_How\_to\_use\_Auto\_Additions\_in\_Empower\_360\_and\_a

# **Featured Products**

ACQUITY UPLC H-Class PLUS Bio System < https://www.waters.com/nextgen/global/products/chromatography/chromatography-systems/acquity-uplc-hclass-plus-system.html>

Empower Chromatography Data Software (CDS) <

https://www.waters.com/nextgen/global/products/informatics-and-software/chromatography-

software/empower-software-solutions/empower-cds.html>

ACQUITY UPLC FLR Detector <

https://www.waters.com/nextgen/global/products/chromatography/chromatography-detectors/acquity-uplcand-acquity-premier-flr-detectors.html>

ACQUITY UPLC Tunable UV Detector <

https://www.waters.com/nextgen/global/products/chromatography/chromatography-detectors/acquity-uplcand-acquity-premier-tunable-uv-detectors.html>

720008786, May 2025

 $\wedge$ 

© 2025 Waters Corporation. All Rights Reserved. 利用規約 プライバシーポリシー 商標 キャリア 法的通知およびプライバシー通知 Cookies Cookie 環境設定